



FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (ROOF RACK)

Product Code: MC01003


COMPATIBLE VEHICLES

NSS PFNDR (R51) SUV 05-12
DAC DSTR (SUV) 14-17

PACKAGE INCLUDED

1- TURTLE® AIR1 CHASSIS	4
2- 5MM ALLEN WRENCH	1
3- CLOTH KEYCHAIN	1
4- TURTLE® AIR1 UPPER RUBBER	4
5- Y1003 CHIN	4
6- Y1003 RUBBER	4
7- M6x50 INBUS BOLT	4
8- M6 1/2 WASHER	4

ZIPLOCK BAG

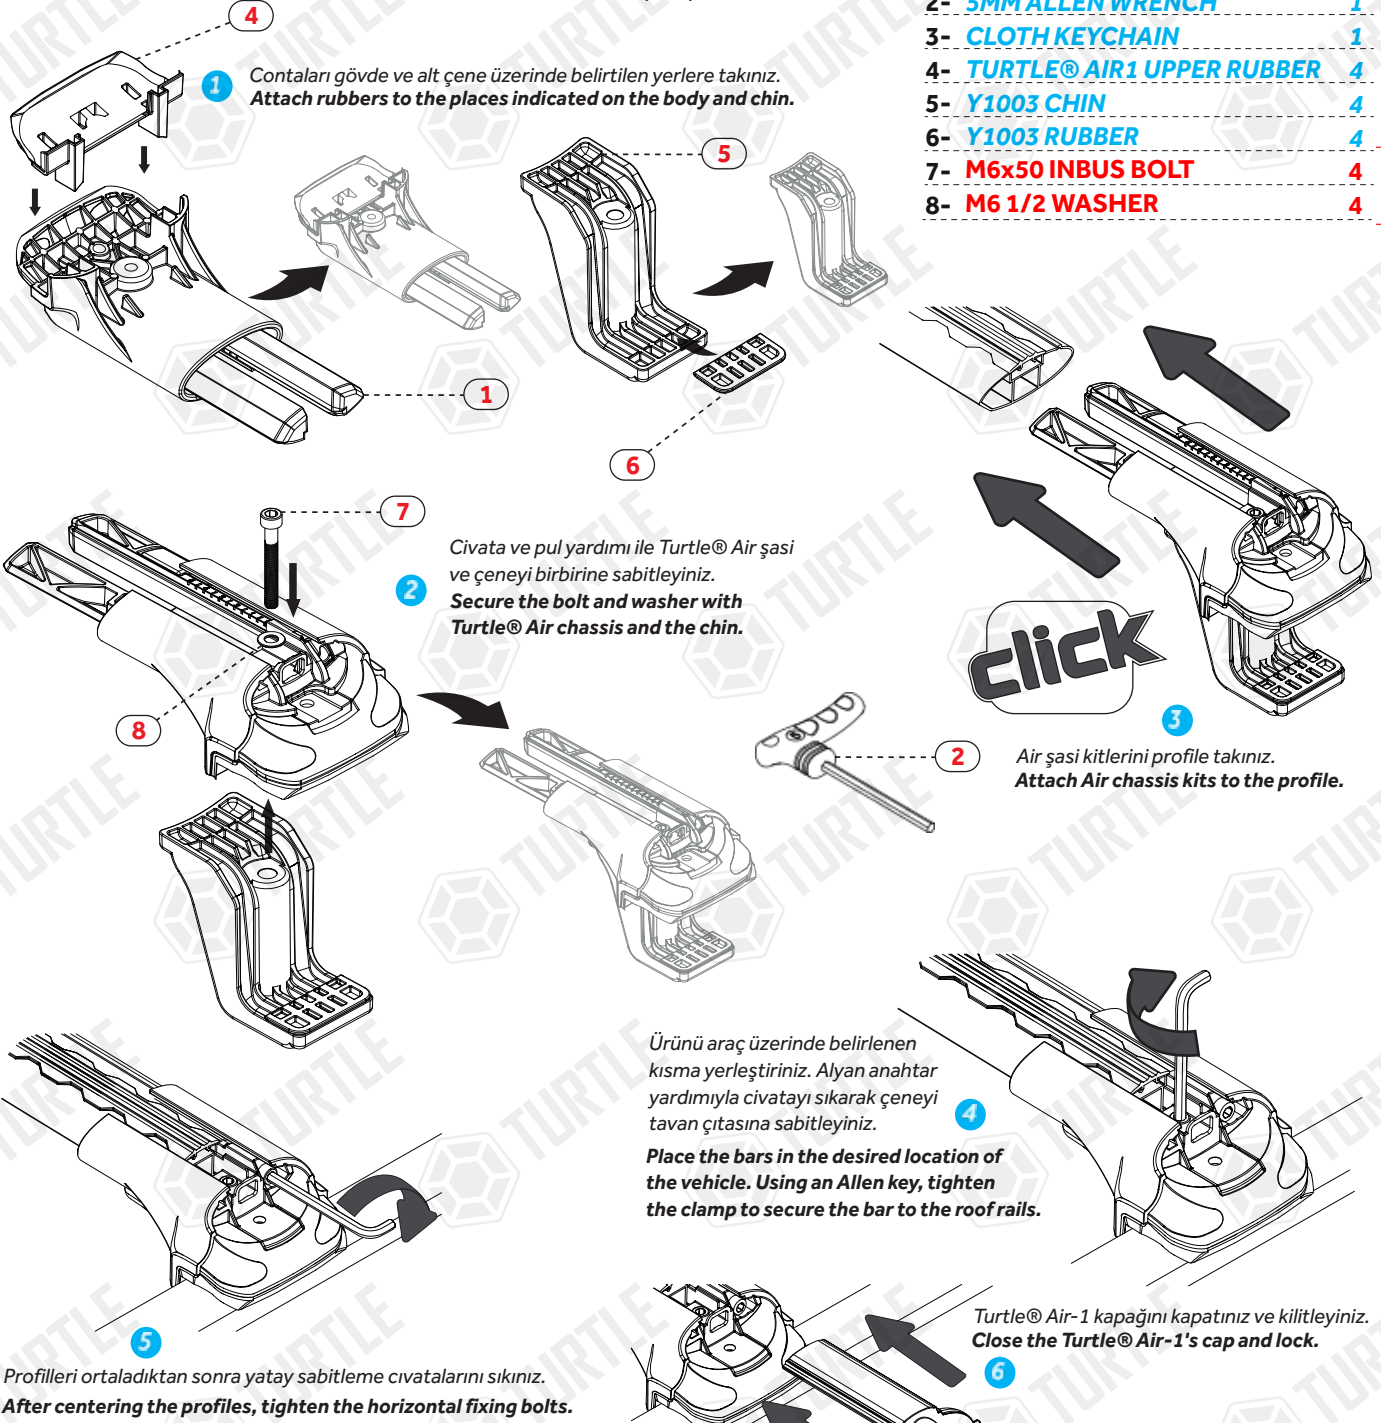

Profilleri ortaldıktan sonra yatay sabitleme civatalarını sıkınız.
After centering the profiles, tighten the horizontal fixing bolts.

Ürünü araç üzerinde belirlenen kısma yerleştiriniz. Alyan anahtar yardımıyla civatayı sıkarak çeneyi tavan çitasına sabitleyiniz.

Place the bars in the desired location of the vehicle. Using an Allen key, tighten the clamp to secure the bar to the roof rails.

Turtle® Air-1 kapağını kapatınız ve kilitleyiniz.
Close the Turtle® Air-1's cap and lock.



SCAN ME
FOR
INSTALLATION
VIDEO



= Max. Load
75kg

