



## FIRST TIME INSTALLATION


- \* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- \* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- \* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

### ASSEMBLY INSTRUCTIONS (ROOF RAIL)


Product Code: MR01011 (Crown)

1 M6 klipsi araç üzerindeki metal parçaya şekildeki gibi takınız.

Attach the M6 clip to the metal part on the vehicle as shown in the figure.

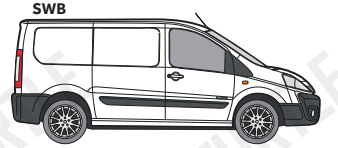

CTRN JMPY-DSPTC (Mk2) VAN 06-16  
PEU TPE XPRT (Mk2) VAN 06-16  
TYT PACE (Mk2) VAN 13-16  
FI SCUD (Mk2) VAN 06-16

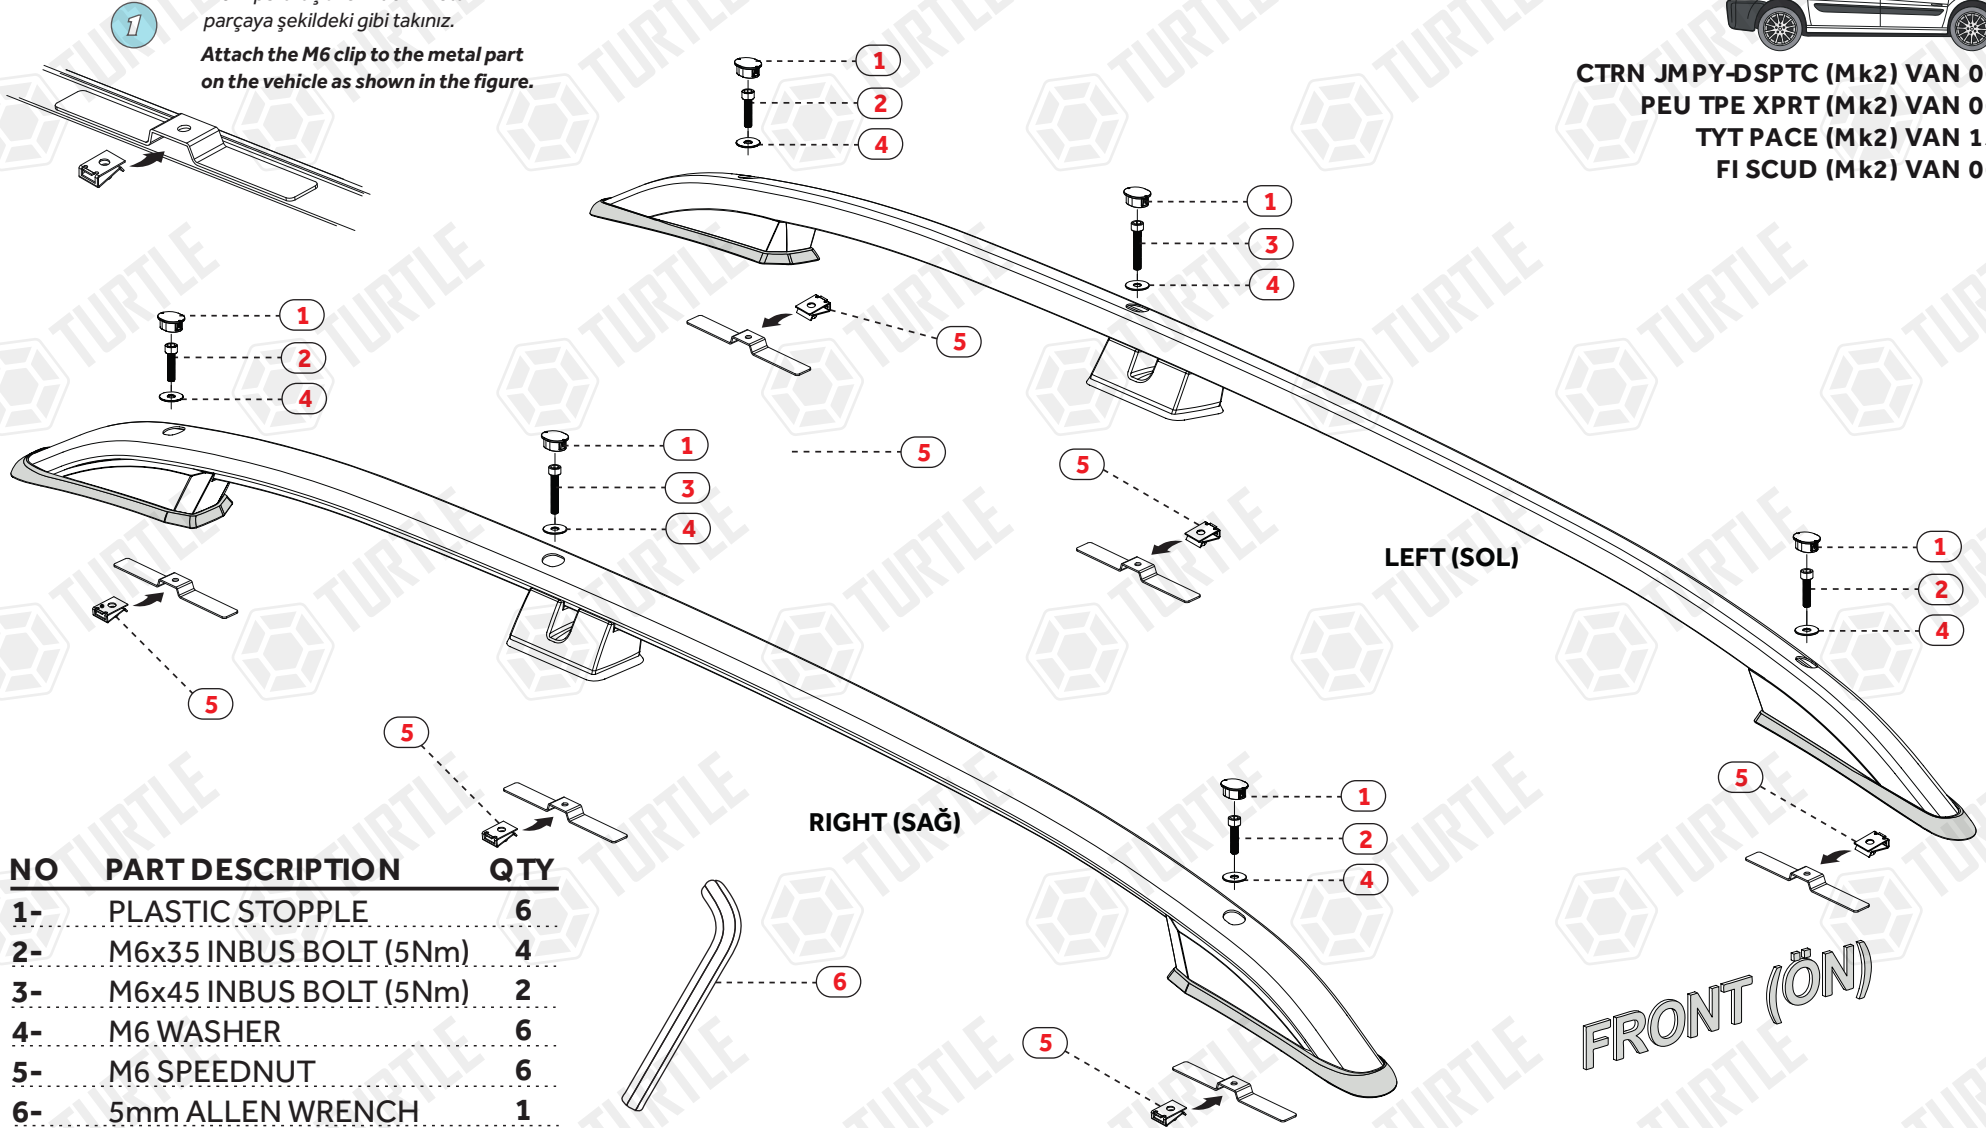

NO	PART DESCRIPTION	QTY
1-	PLASTIC STOPPLE	6
2-	M6x35 INBUS BOLT (5Nm)	4
3-	M6x45 INBUS BOLT (5Nm)	2
4-	M6 WASHER	6
5-	M6 SPEEDNUT	6
6-	5mm ALLEN WRENCH	1

MR01011 / Rev.02 / 08.12.2022 (ECE)