









ASSEMBLY INSTRUCTIONS (ROOF RAIL)

Product Code: MR01012 (Crown)



1

M6 klipsi araç üzerindeki metal parçaya şekildeki gibi takınız.



Attach the M6 clip to the metal part on the vehicle as shown in the figure.

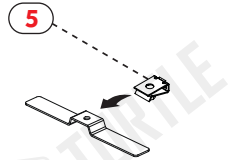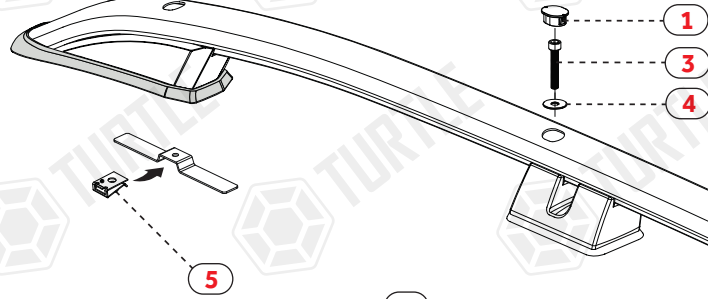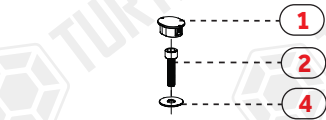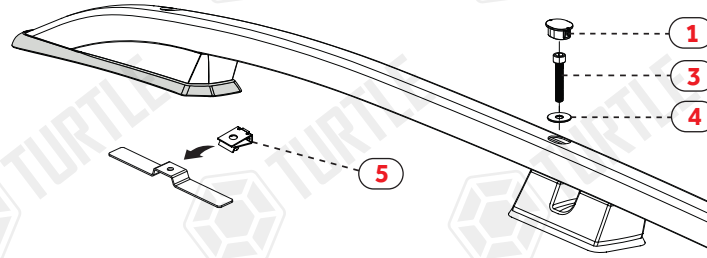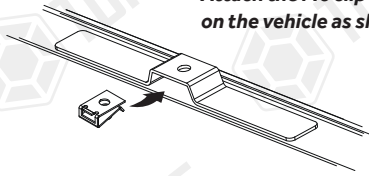

LEFT (SOL)

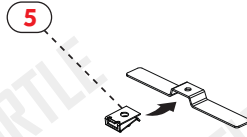
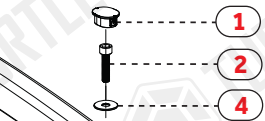


RIGHT (SAĞ)

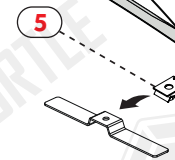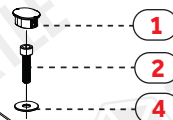

FRONT (ÖN)

NO	PART DESCRIPTION	QTY
1-	PLASTIC STOPPLE	6
2-	M6x35 INBUS BOLT (5Nm)	4
3-	M6x45 INBUS BOLT (5Nm)	2
4-	M6 WASHER	6
5-	M6 SPEEDNUT	6
6-	5mm ALLEN WRENCH	1

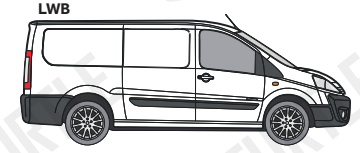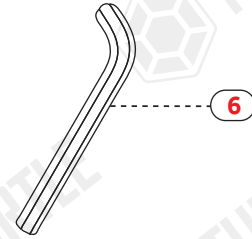

CTRN JMPY-DSPTC (Mk2) VAN 06-16
PEU TPE XPRT (Mk2) VAN 06-16
TYT PACE (Mk2) VAN 13-16
FI SCUD (Mk2) VAN 06-16