



ASSEMBLY INSTRUCTIONS (ROOF RAIL)

Product Code: MR01013 (Crown)


FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

SWB



FRD CNNCT VAN 02-12

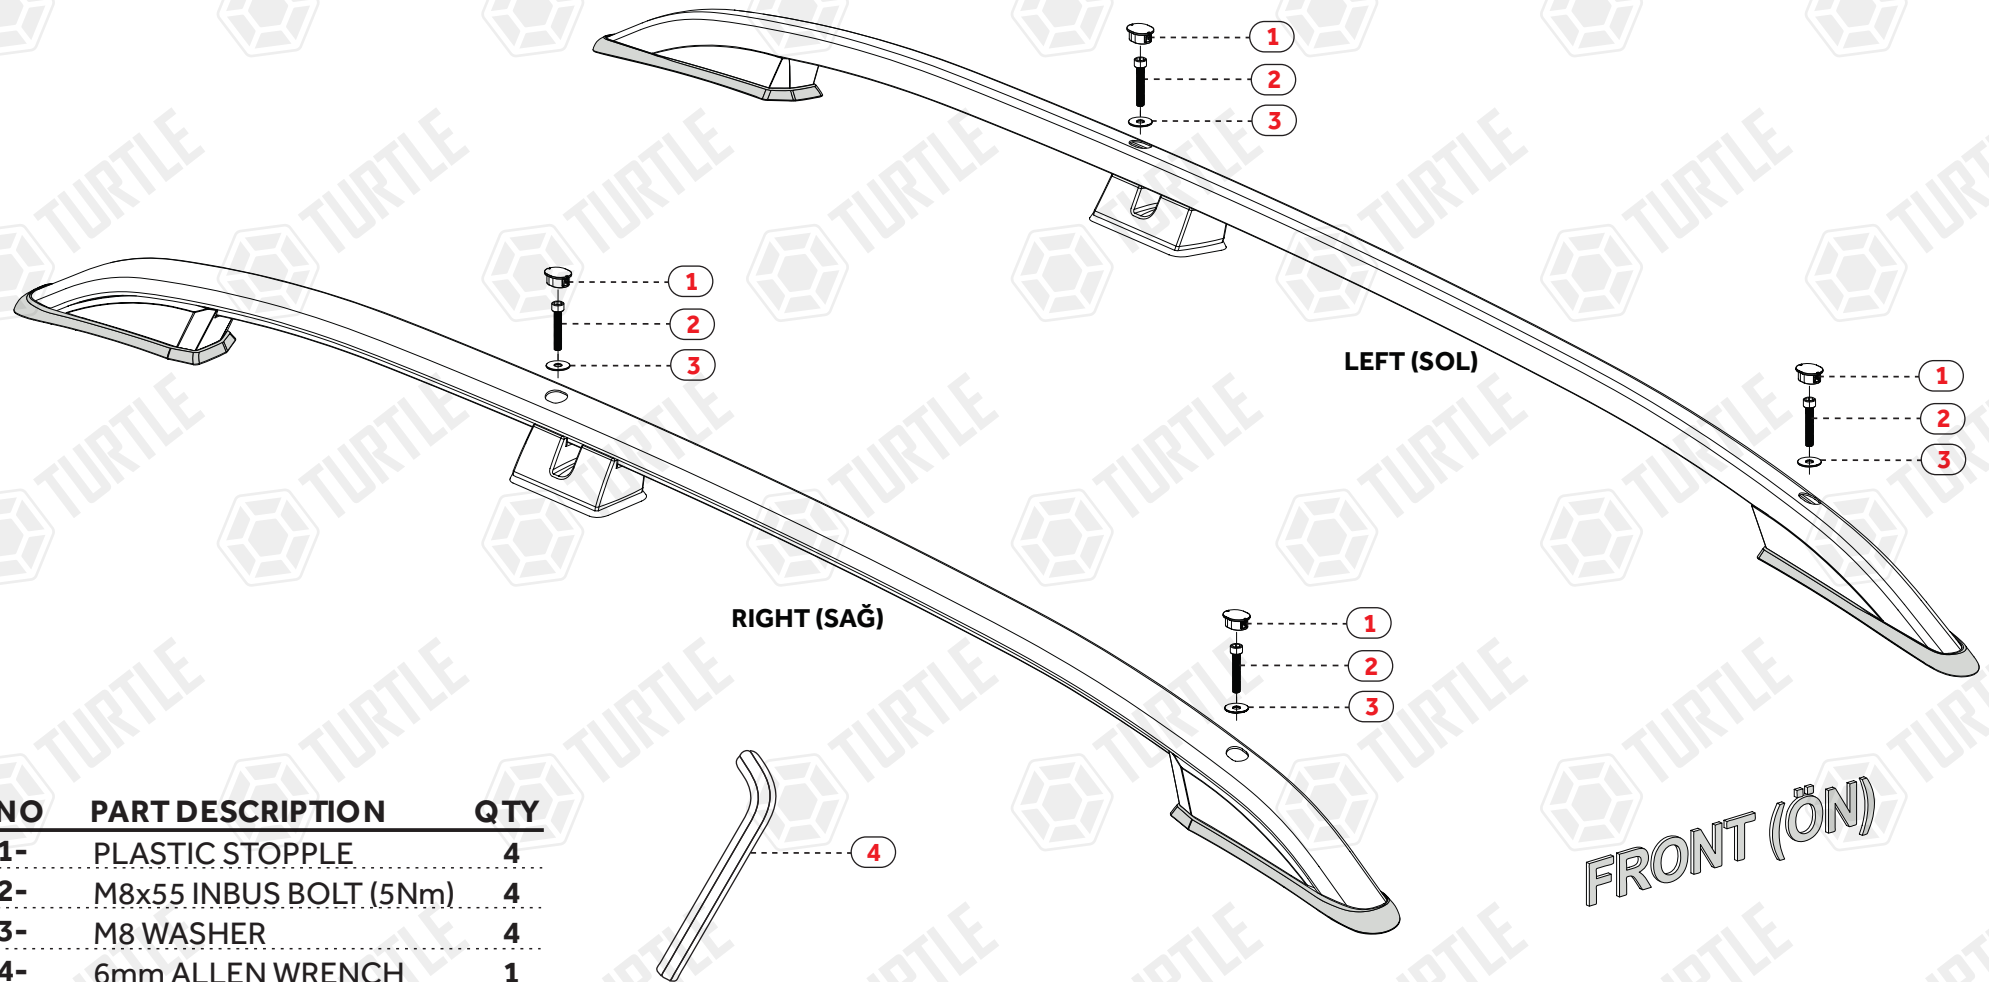

NO	PART DESCRIPTION	QTY
1-	PLASTIC STOPPLE	4
2-	M8x55 INBUS BOLT (5Nm)	4
3-	M8 WASHER	4
4-	6mm ALLEN WRENCH	1