




ASSEMBLY INSTRUCTIONS (ROOF RAIL)


Product Code: MR01023 (Crown)

FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

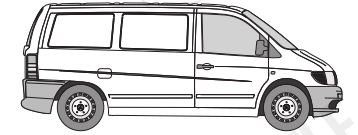

MBNZ VIT (W638) VAN 96-03

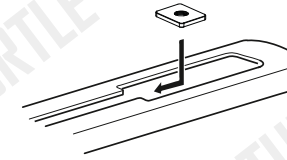

Montaja başlamadan önce şekildeki kanallara kare somunları gösterildiği gibi takınız.
Before starting the assembly, attach the rectangle nuts to the channels in the figure as shown.

LEFT (SOL)

RIGHT (SAĞ)

FRONT (ÖN)

NO	PART DESCRIPTION	QTY
1-	PLASTIC STOPPLE	6
2-	M6x45 INBUS BOLT (5Nm)	4
3-	M6x70 INBUS BOLT (5Nm)	2
4-	M6 WASHER	6
5-	M6 RECTANGLE NUT	6
6-	5mm ALLEN WRENCH	1