




ASSEMBLY INSTRUCTIONS (ROOF RAIL)
Product Code: MR01046 (Crown)


FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

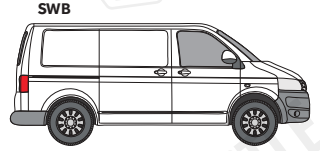

**VWGN TRNSPT (T5/T6) VAN 03-
VWGN CALFRN (T5/T6) VAN 03-
VWGN CARVL (T5/T6) VAN 03-
VWGN MVAN (T5/T6) VAN 03-
VWGN SHTTL (T5/T6) VAN 03-**

*Civata yuvasının etrafına süngeri şekilindeki gibi yapıştırınız.
Süngerin ortasındaki boşluğa sıvı contayı bolca sıkınız.
Uygulamayı 3dk içerisinde kurumadan tamamlayınız.
**Stick the sponge tape around the bolt slot as shown in
the figure. Squeeze the liquid rubber in the middle of
the sponge as a thick layer. Apply in 3min before silicone dry.***

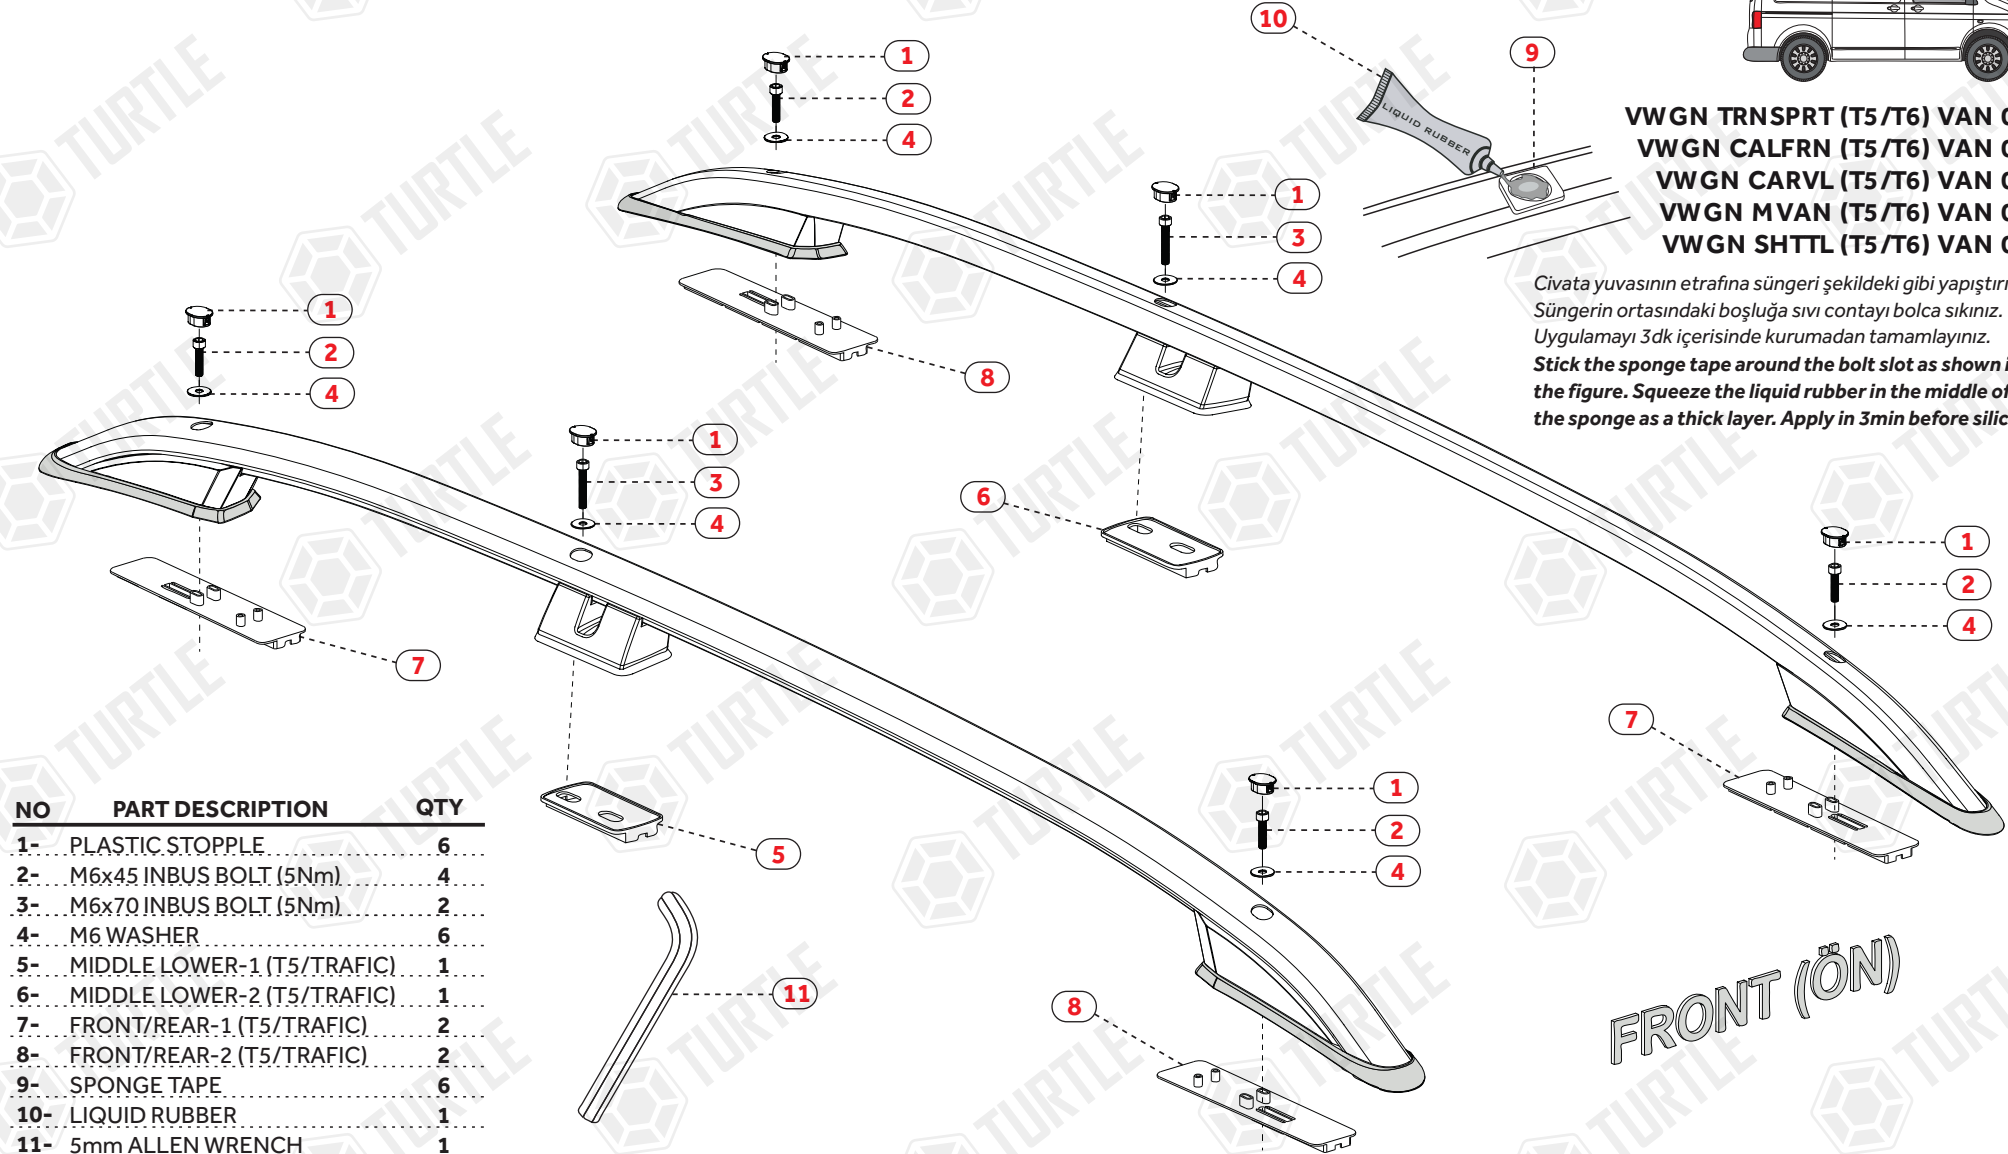

NO	PART DESCRIPTION	QTY
1-	PLASTIC STOPPLE	6
2-	M6x45 INBUŞ BOLT (5Nm)	4
3-	M6x70 INBUŞ BOLT (5Nm)	2
4-	M6 WASHER	6
5-	MIDDLE LOWER-1 (T5/TRAFIC)	1
6-	MIDDLE LOWER-2 (T5/TRAFIC)	1
7-	FRONT/REAR-1 (T5/TRAFIC)	2
8-	FRONT/REAR-2 (T5/TRAFIC)	2
9-	SPONGE TAPE	6
10-	LIQUID RUBBER	1
11-	5mm ALLEN WRENCH	1