




ASSEMBLY INSTRUCTIONS (ROOF RAIL)
Product Code: MR01052 (Crown)


FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

SWB

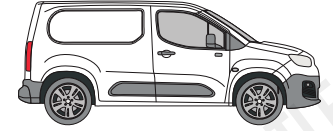

**TYT PACE CITY VERS VAN 19-
VXHL CMB LIFE VAN 19-
TYT PACE CITY VAN 19-
OPL CMB LIFE VAN 19-
CTRN BRLNG VAN 19-
VXHL CMB E VAN 19-
PEU PRTRN VAN 19-
OPL CMB E VAN 19-
PEU RFTR VAN 19-**

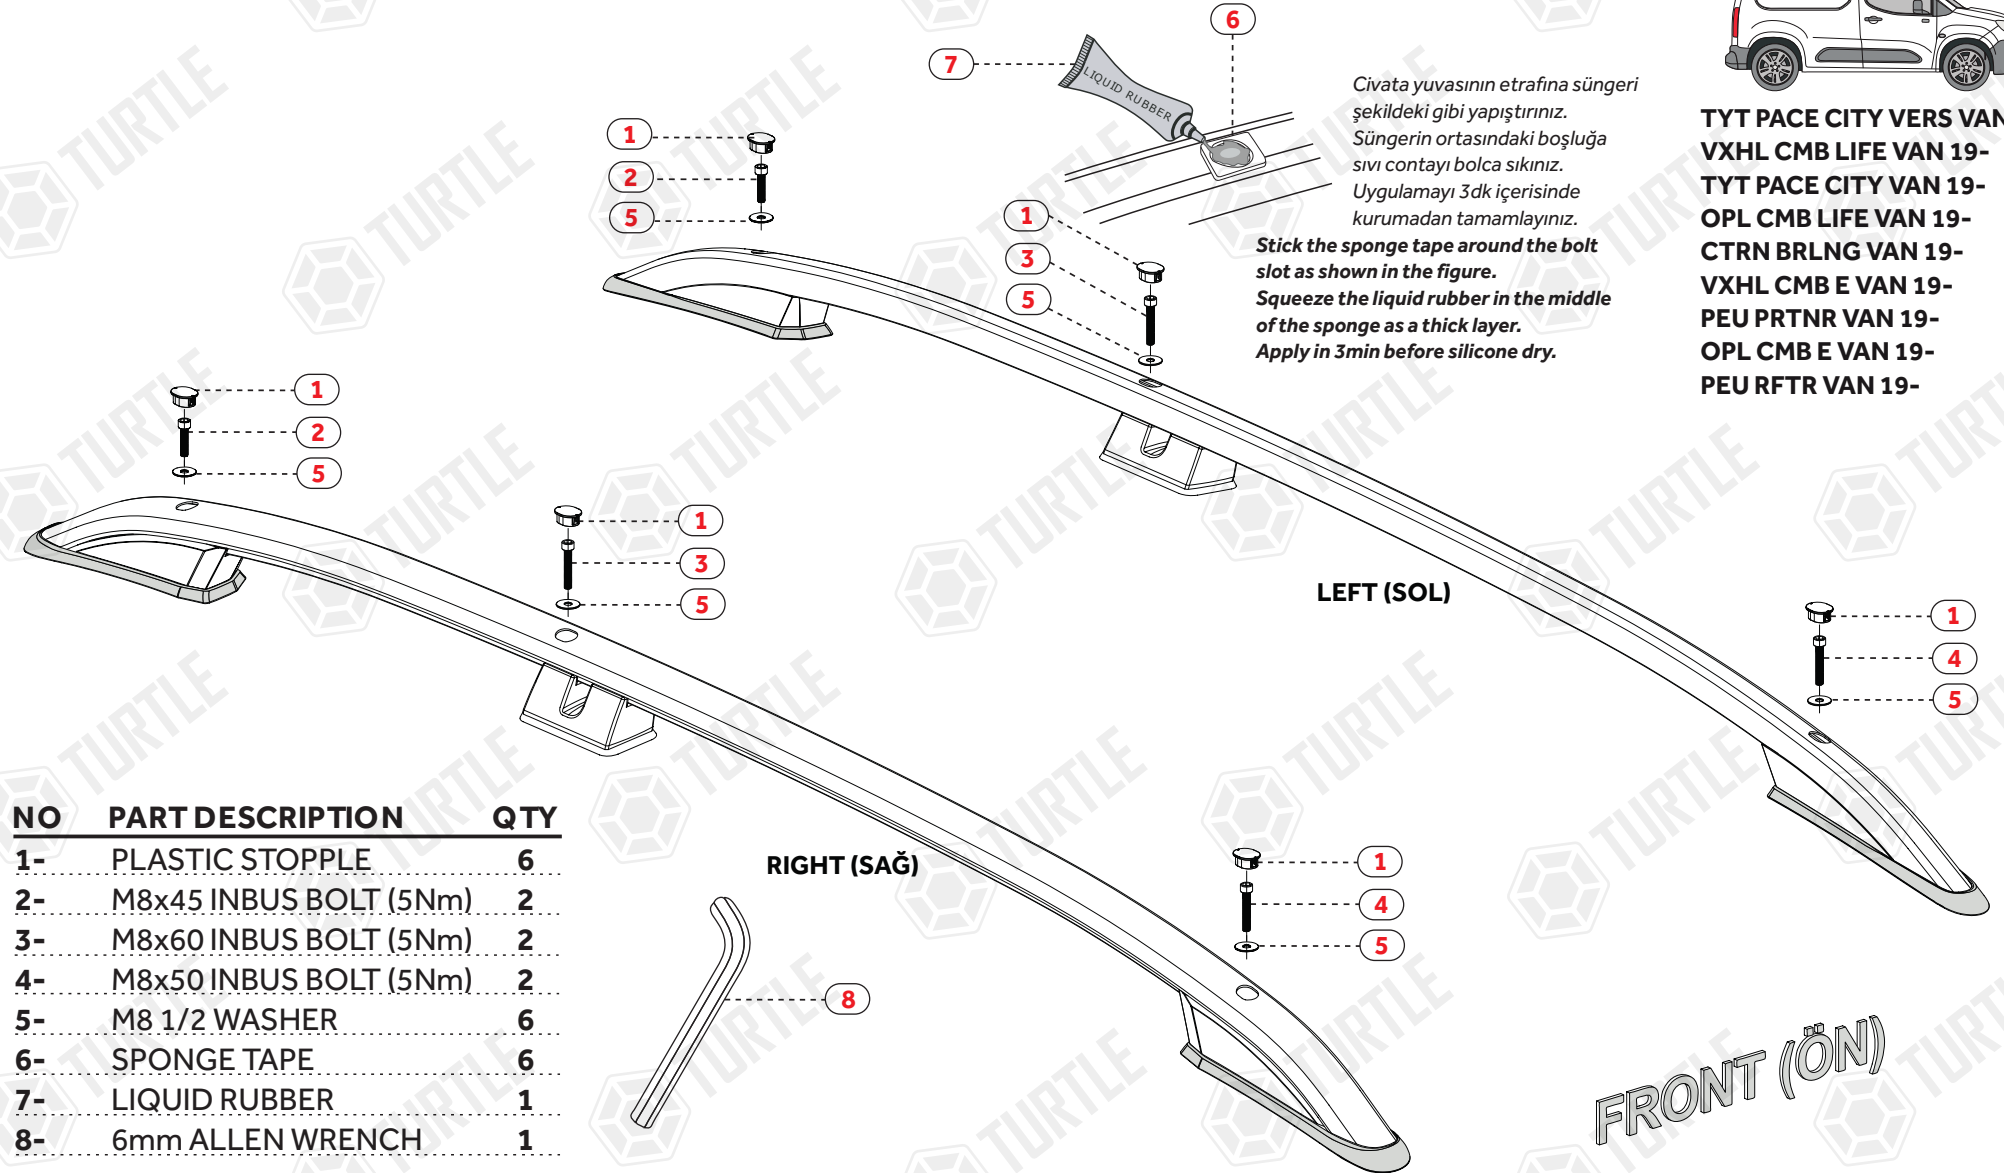

NO	PART DESCRIPTION	QTY
1-	PLASTIC STOPPLE	6
2-	M8x45 INBUS BOLT (5Nm)	2
3-	M8x60 INBUS BOLT (5Nm)	2
4-	M8x50 INBUS BOLT (5Nm)	2
5-	M8 1/2 WASHER	6
6-	SPONGE TAPE	6
7-	LIQUID RUBBER	1
8-	6mm ALLEN WRENCH	1

Civata yuvasının etrafına süngeri
şekildeki gibi yapıştırınız.
Süngerin ortasındaki boşluğa
sıvı contayı bolca sıkınız.
Uygulamayı 3dk içerisinde
kurumadan tamamlayınız.

**Stick the sponge tape around the bolt
slot as shown in the figure.
Squeeze the liquid rubber in the middle
of the sponge as a thick layer.
Apply in 3min before silicone dry.**