













ASSEMBLY INSTRUCTIONS (ROOF RAIL)


Product Code: MR01055 (Crown)

M6 klipsini araç tavanında
belirtilen yere takın.

Attach the M6 speednut to the place
indicated on the vehicle roof.

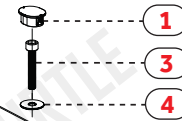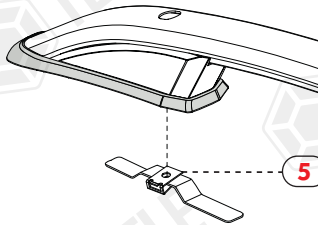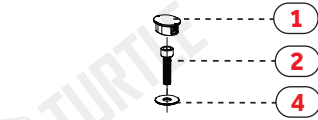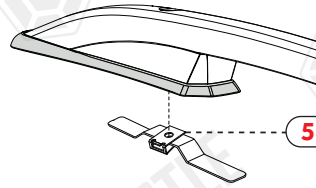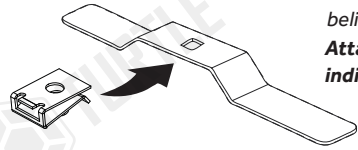


NO	PART DESCRIPTION	QTY
1-	PLASTIC STOPPLE	6
2-	M6x40 INBUS BOLT (5Nm)	2
3-	M6x45 INBUS BOLT (5Nm)	4
4-	M6 WASHER	6
5-	M6 SPEEDNUT	6
6-	5mm ALLEN WRENCH	1

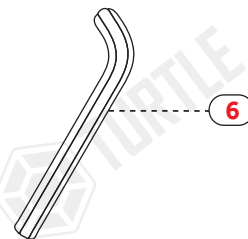

FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

L2 STANDARD
L1: VVR (Mk3) VAN 19-

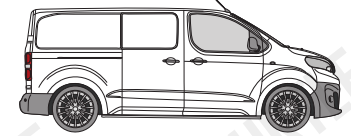

CTRN DSPTC-SPC TOUR (Mk3) VAN 17-
TYT PACE-PACE VERS (Mk3) VAN 17-
PEU XPRT-TRVL (Mk3) VAN 17-
OPL ZFR LIFE (Mk3) VAN 19-
VXHL VVR (Mk3) VAN 19-
OPL VVR (Mk3) VAN 19-

FRONT (ÖN)